


ziaino® inhibits activity of adhered Feline calicivirus (Feline calicivirus infection) related to norovirus by over 99% in 4 hours

Test outline

- (1) Testing organisation: Kitasato Research Center for Environmental Science
- (2) Test subject: Adhered Feline calicivirus
- (3) Test volume: Approx. 25m³ laboratory (3.3m×3.5m×2.2m)
- (4) Test result: Inhibited over 99% in 4 hours
- (5) Report No.: Kitakanhatsu 2015-1032


Test ambient

Approx. 25m³

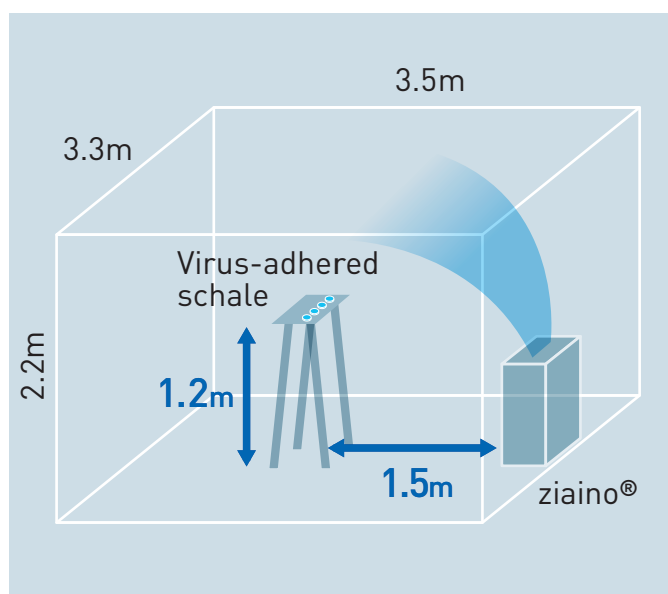

Test result

Feline calicivirus

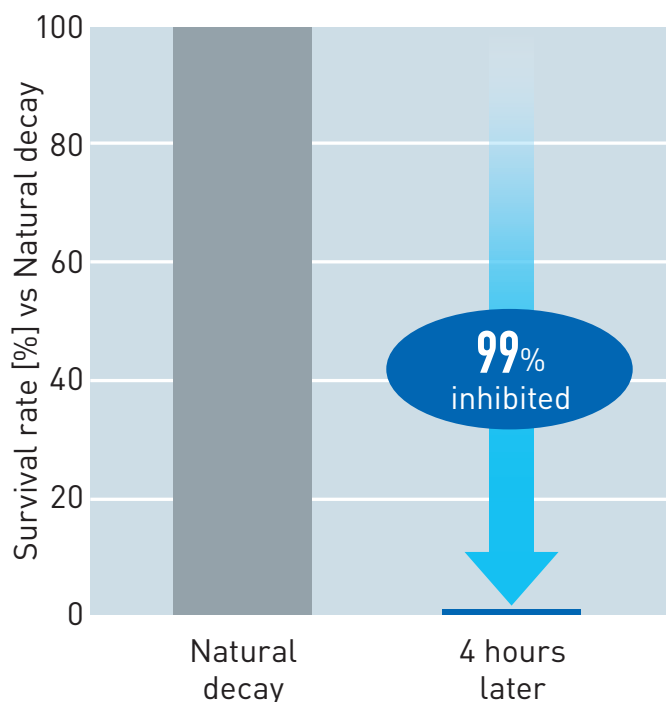

パナソニックエコシステムズ株式会社 殿

試 験 報 告 書

業務用空間清浄機「JML30」
による付着ウイルスの抑制性能評価試験
(25 m³ 空間)

北環発 2015_1032 号

2015 年 9 月 16 日

神奈川県相模原市南区北里 1 丁目 15 番 1 号
一般財団法人 北里環境科学センター
理 事 長 伊 藤 俊 洋

試験内容を公表する際は、結果の表記等について専門的な立場から確認させていただいております。なお、確認目的と申込様式は、ホームページに掲載しております。

(http://www.kitasato-e.or.jp/?page_id=87)